

DuPont™ Kalrez® 8575

For Semiconductor Oxidation, Diffusion, Lamp Anneal and RTP Applications

Technical Information – March, 2017

Product Description

DuPont™ Kalrez® 8575 perfluoroelastomer parts are a white product for oxidation, diffusion, lamp anneal and RTP sealing applications. Kalrez® 8575 exhibits excellent thermal stability and long-term sealing performance, less Infrared (IR) absorption and significantly reduced outgassing properties at elevated temperatures. It also has good mechanical properties and is well-suited for both static and low stress/low sealing force applications. A maximum application temperature of 300°C (572°F) is suggested. Ultrapure post-cleaning and packaging is standard for all 8575 parts.



Key Performance Features Contribute to Extended Seal Life

- White color reduces IR absorption and reduces seal temperature
- Very low outgassing properties
- Excellent (low) compression set properties
- Excellent elastic recovery properties

Suggested Applications

- Chamber lids
- Gas inlets
- Quartz windows
- Throttle valves
- Other plasma applications

Typical Physical Properties¹

Color	White
Hardness, Shore A (pellet) ²	63
Hardness, Shore M (O-ring) ³	74
100% Modulus ⁴ , MPa (psi)	2.99 (434)
Tensile Strength at Break ⁴ , MPa (psi)	14.53 (2107)
Elongation at Break ⁴ , %	220
Compression Set ⁵ , %, 70 hr. at 204 °C (400°F)	23
Max. Application Temperature ⁶ , °C (°F)	300 (572)

¹ Not to be used for specification purposes

² ASTM D2240 (pellet test specimens)

³ ASTM D2240 and ASTM D1414 (AS568 K214 O-ring test specimens)

⁴ ASTM D412 test method (dumbbell test specimens)

⁵ ASTM D395B (pellet test specimens)

⁶ DuPont proprietary test method



The miracles of science™

Seal Force Retention/Compression Set

Figure 1. Seal Force Retention 200°C (400°F)*

*ISO 3384, Method A, (AS568 K214-O-ring specimen)


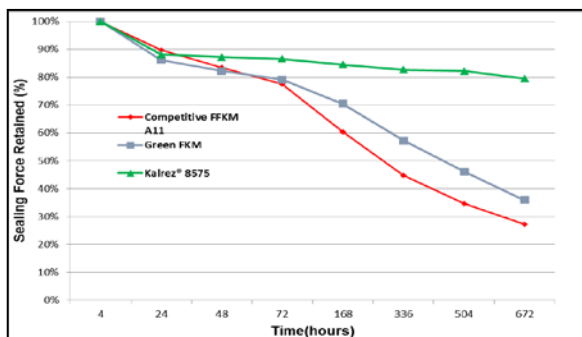



Figure 2. Compression Set at 200°C (400°F)*

*ASTM D395B 214 O-ring

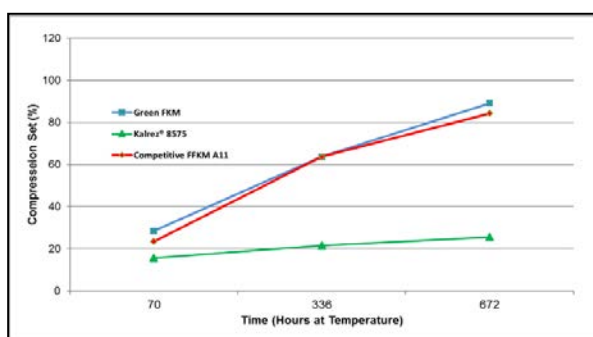

IR Absorption vs. Seal Temperature

In RTP processes, IR light is used to heat the wafer. The amount of IR light absorbed by the seal is influenced by color. White seals like Kalrez® 8575 will absorb less IR light than black seals. As a result, the effects of thermal aging on white seals will be reduced throughout the life of the seal.

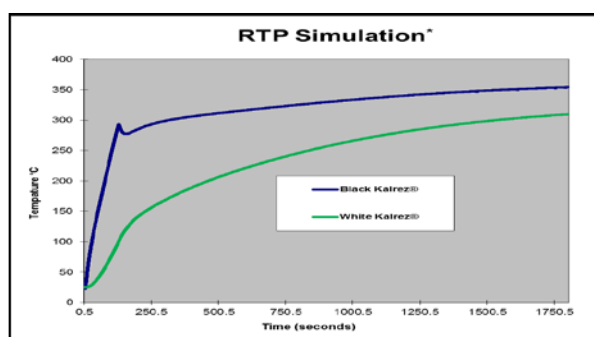

*DuPont proprietary test method

Visit us at kalrez.dupont.com or vespel.dupont.com

Contact DuPont at the following regional locations:

North America
800-222-8377

Latin America
+0800 17 17 15

Europe, Middle East, Africa
+41 22 717 51 11

Greater China
+86-400-8851-888

ASEAN
+65-6586-3688

Japan
+81-2-5521-8484

The information provided in this data sheet corresponds to DuPont knowledge on the subject at the date of its publication. This information may be subject to revision as new knowledge and experience becomes available. The data provided fall within the normal range of product properties and relate only to the specific material designated; these data may not be valid for such material used in combination with any other materials, additives or pigments or in any process, unless expressly indicated otherwise.

The data provided should not be used to establish specification limits or used alone as the basis of design; they are not intended to substitute for any testing you may need to conduct to determine for yourself the suitability of a specific material for your particular purposes. Since DuPont cannot anticipate all variations in actual end-use and disposal conditions, DuPont does not guarantee results, makes no warranties and assumes no liability in connection with any use of this information. All such information is given and accepted at the buyer's risk. It is intended for use by persons having technical skill, at their own discretion and risk. Nothing in this publication is to be considered as a license to operate under or a recommendation to infringe any patent.

CAUTION: Do not use DuPont materials in medical applications involving implantation in the human body or contact with internal body fluids or tissues unless the material has been provided from DuPont under a written contract that is consistent with DuPont policy regarding medical applications and expressly acknowledges the contemplated use. For further information, please contact your DuPont representative. You may also request a copy of DuPont POLICY Regarding Medical Applications H-50103-5 and DuPont CAUTION Regarding Medical Applications H-50102-5.

Copyright © DuPont. The DuPont Oval Logo, DuPont™, The miracles of science™, Kalrez® is a trademark or registered trademark of E.I. du Pont de Nemours and Company or its affiliates. All rights reserved.

(03/17) Reference No. KZE-H88213-00-K0317



The miracles of science™